


TWST PAD HOLDER

product set up instructions

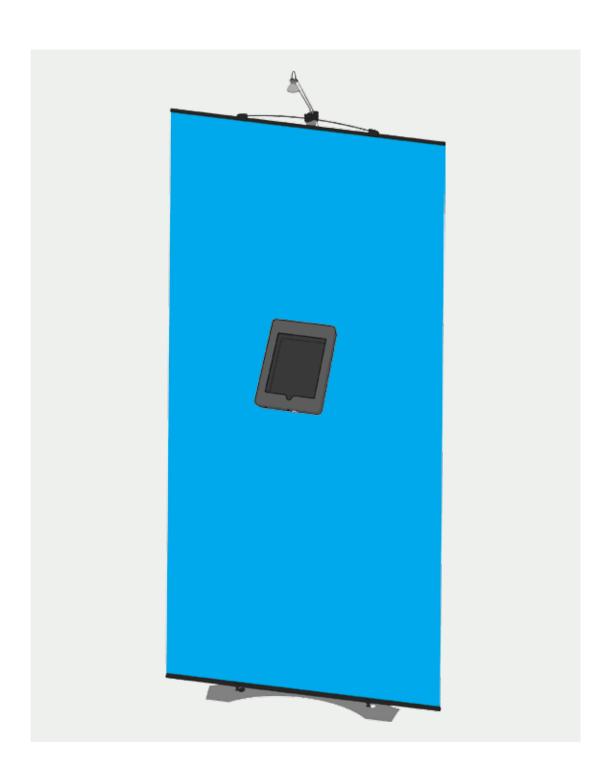









Twist iPad Holder Setup Instructions

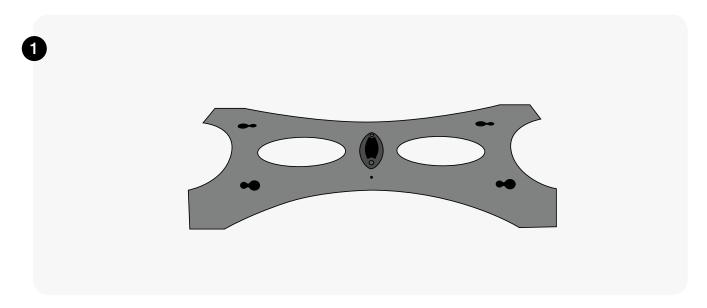


Place the Twist base on the floor.

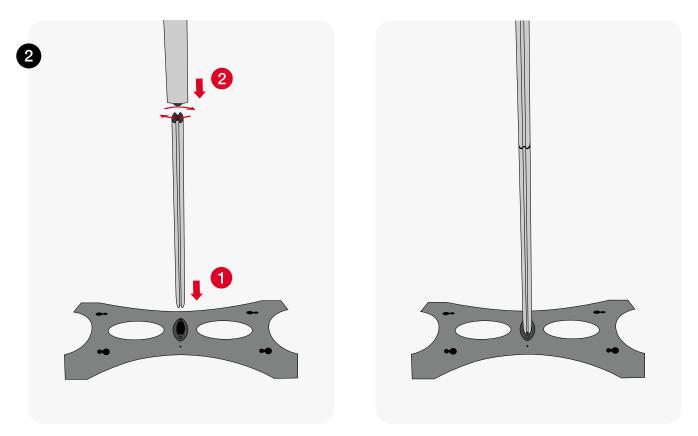


- 1. Place the first Twist extrusion into the base.
- 2. Take the second Twist extrusion and place into the hole located at the top of the first one, twisting it 90 degrees to lock it in place.




Twist iPad Holder Setup Instructions

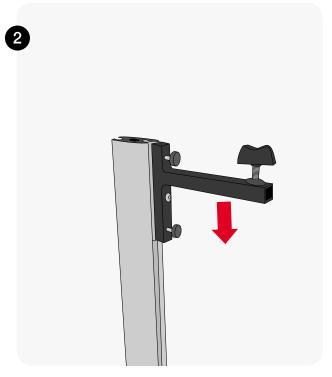


Insert iPad arm into the middle TWIST extrusion. Loosely tighten one of the screws to stop it falling down the complete extrusion.

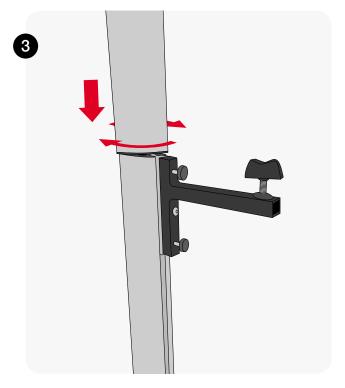

Attach top Twist extrusion.

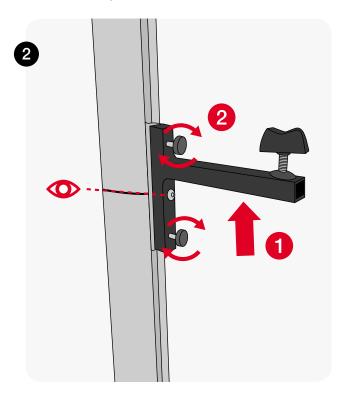

- 1. Position the arm so that the bolt aligns with the join of the two Twist extrusions.
- 2. Tighten the screws to lock it into place.

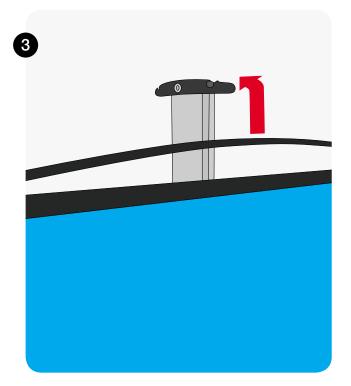


Hang the graphic.

Tw:st°


Twist iPad Holder Setup Instructions




Carefully, push the arm through the graphic.

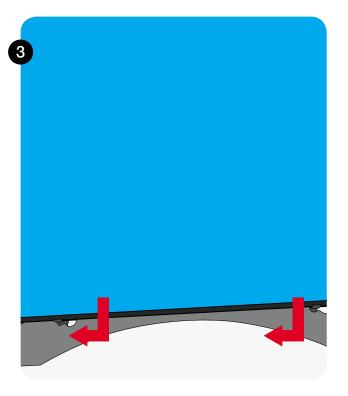

Pull down graphic and attach to the TWIST base.

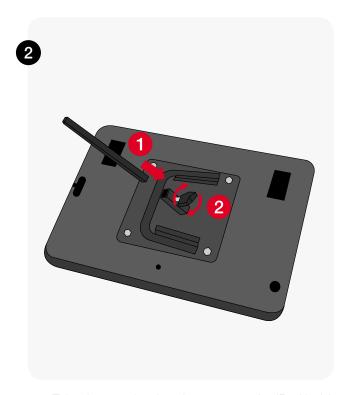


- 1. Take the metal rod and connect to the iPad holder.
- 2. Secure it in place by tightening the screw.

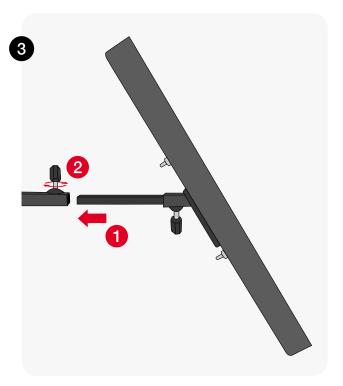

- 1. Take the iPad holder and connect it to the arm.
- 2. Tighten the screw on the arm to secure it into place.



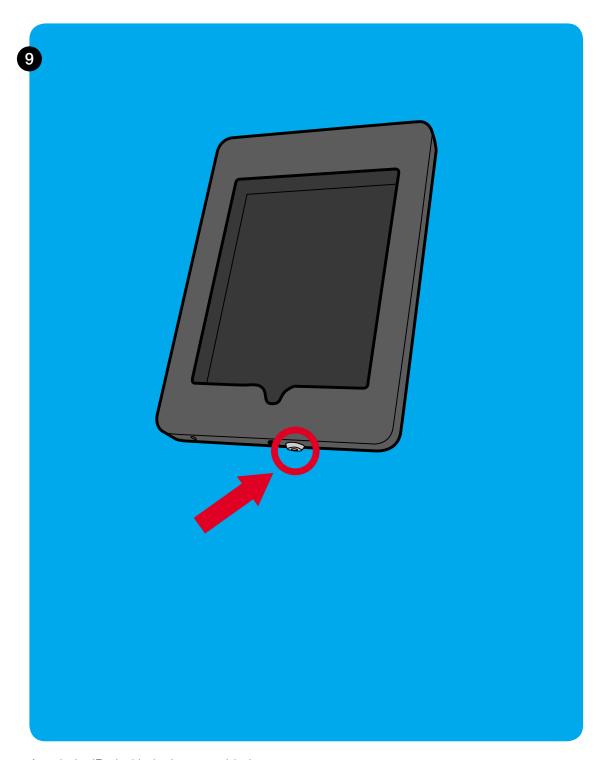

Attach the iPad with the keys provided.